Nov/2012

Sundtek DM500 HD USB PCB User Guide

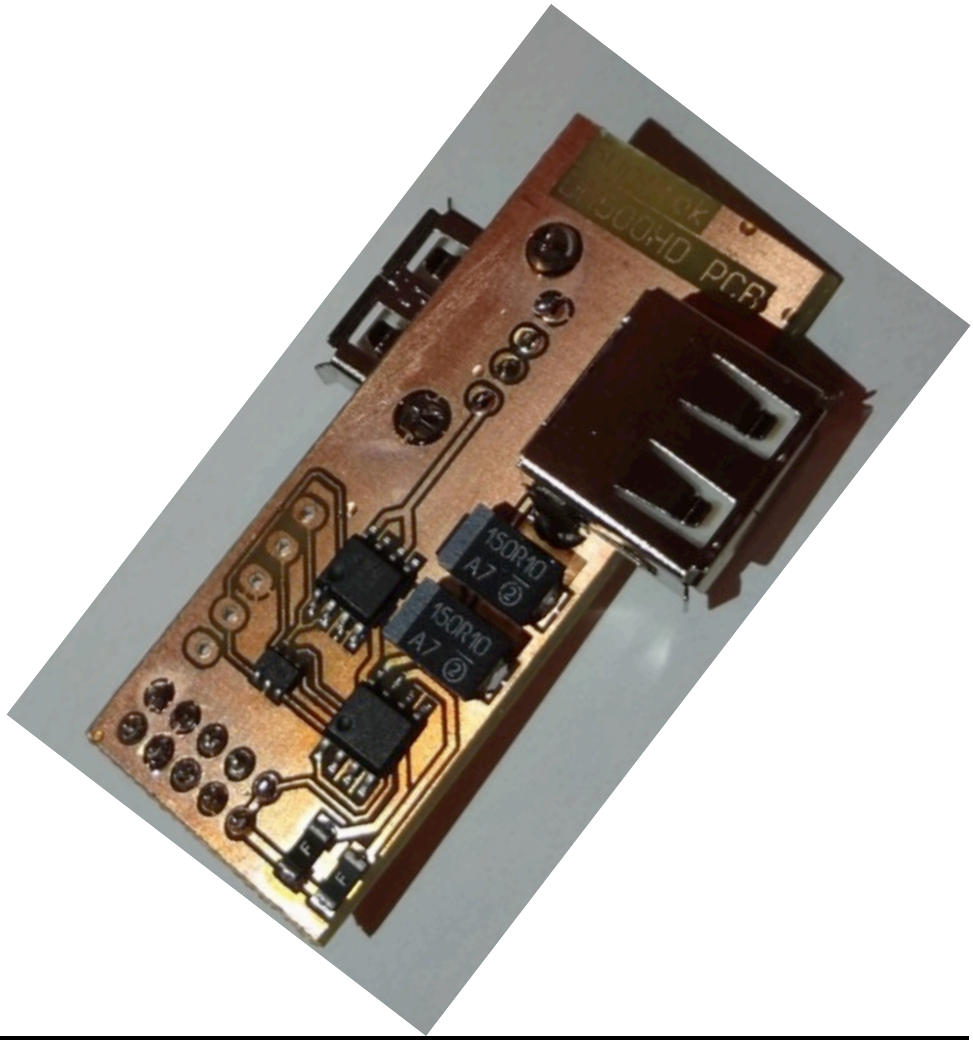

Note: Pictures are for reference only

Tools

1. **Soldering**
2. **Screwdriver**
3. **Suitable screws*2**
4. **Tweezers**
5. **Knife**

Procedure

<I> Disassembling

1. Remove the cover of DM500 HD
2. Remove screw above of “Scart TV”
3. And then move the fan to reserve space for fix/insert USB connector and USB mount cable

4. Remove Resistors of R1010 and R1011\

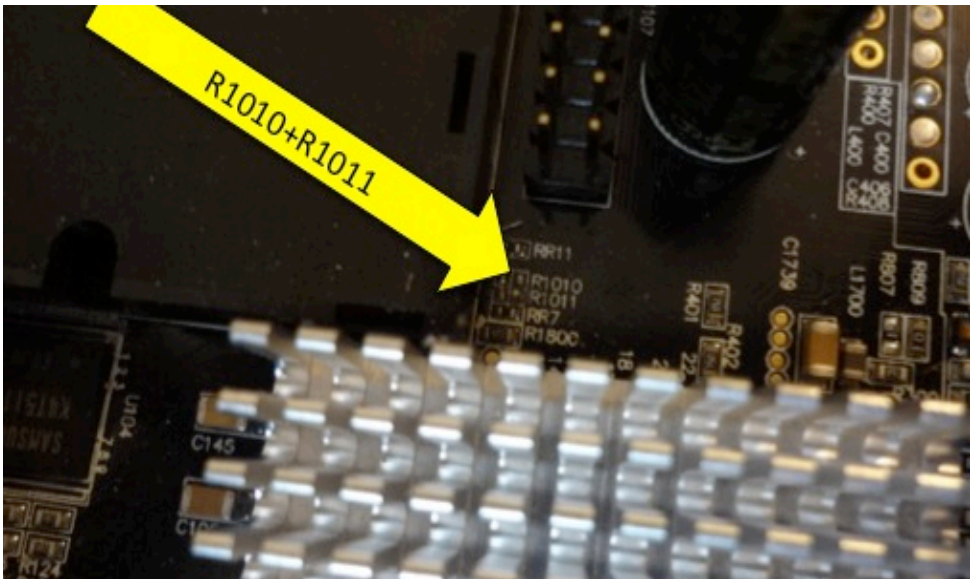

<Assembling>

1. Connect PCB to DM500 HD

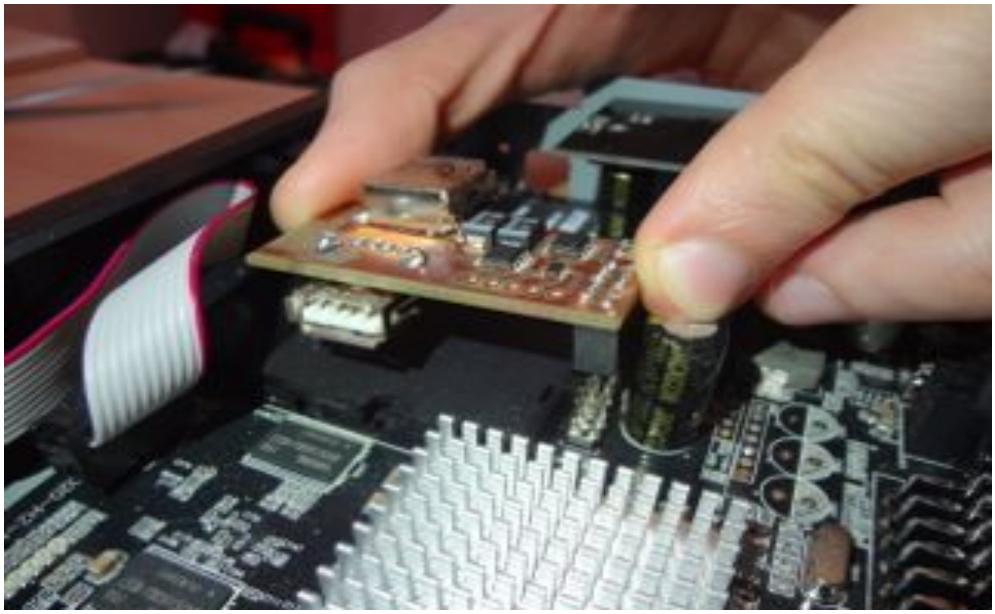

2. Modified USB mount cable to fit DM 500 HD mechanism.

3. Insert USB mount cable to DM500 HD and follow DM 500 HD placement to connect to PCB USB port.

4. Recovering DM500 HD including the fan and top case

5. DONE !!
   Congratulation !! You make it !

ENJOY !!!

This User's Manual is for specific product, and all its contents are processed with due care but are not ensured fully correct.
We assume no responsibility for any loss arising from use of this manual.
The right to interpret all contents of this User's Guide belongs to Sundtek
The manual is subject to change without notice.